

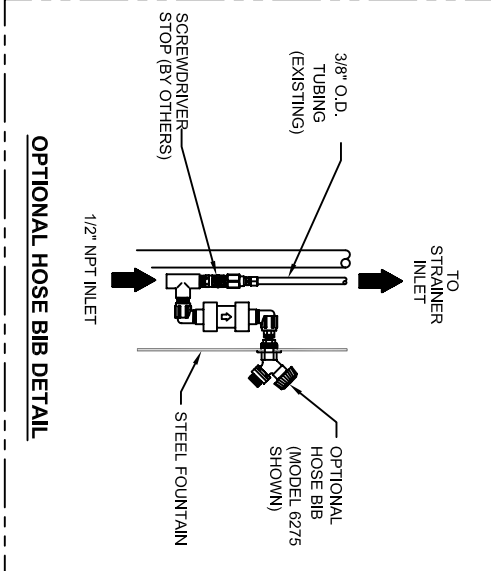
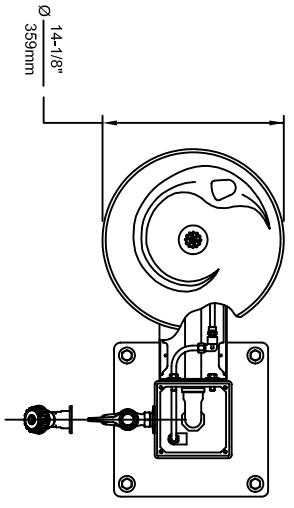
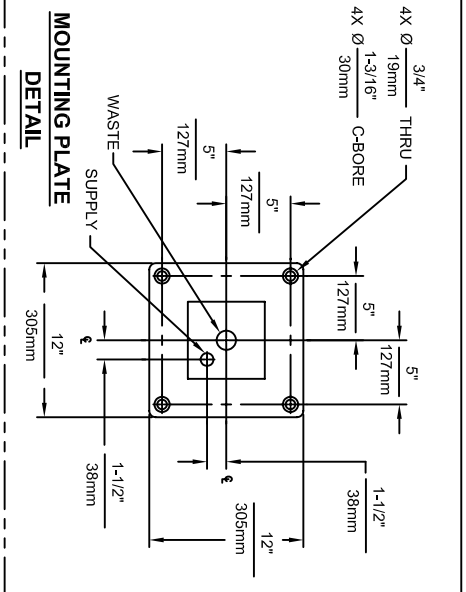



THIS DOCUMENT IS TRUE AND CORRECT AT TIME OF PUBLICATION. CONTINUED PRODUCT IMPROVEMENTS MAKE SPECIFICATIONS AND MEASUREMENTS SUBJECT TO CHANGE WITHOUT NOTICE.

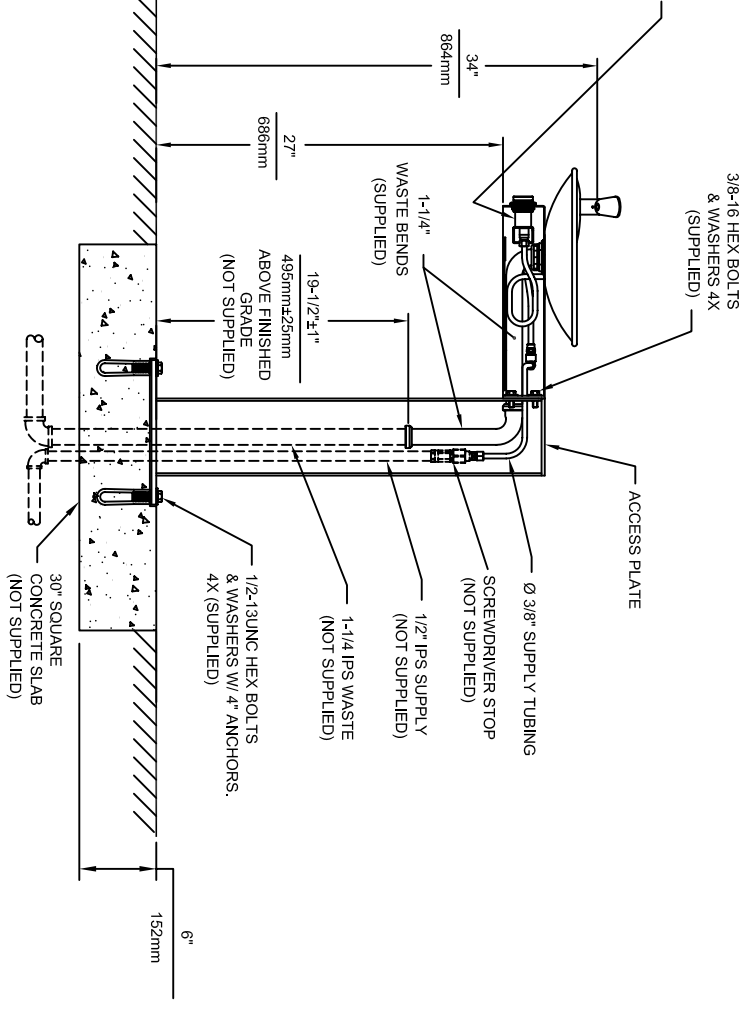

REMOVE VALVE FROM PUSH BUTTON TO INSTALL WASTE ELBOW ONTO BOWL. AFTER WASTE ELBOW IS INSTALLED, REINSTALL VALVE & ADJUST FLOW

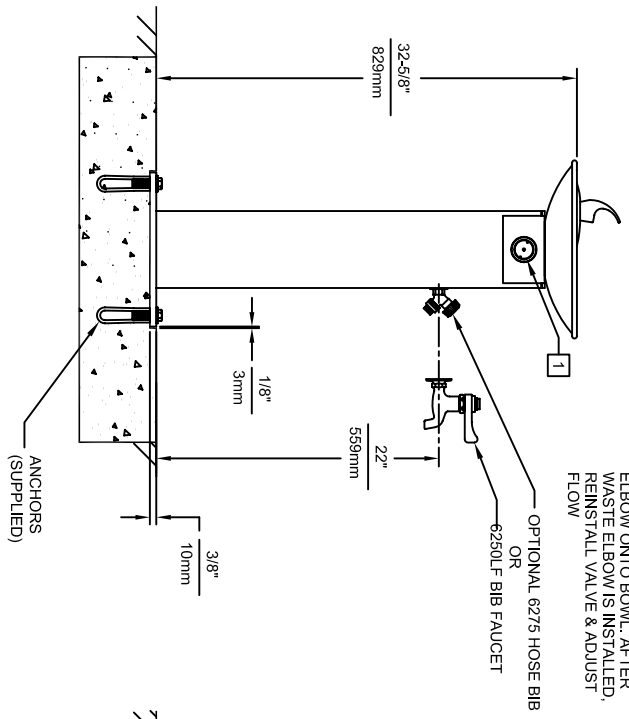

 **NOTES:**  
 1 REFER TO 5874SS OPERATION AND MAINTENANCE MANUAL FOR PUSH BUTTON AND VALVE INSTALLATION/MAINTENANCE INSTRUCTIONS.



1455 KLEPPE LANE  
 SPARKS, NEVADA 89431  
 (775) 359-4712 FAX (775) 359-7424  
 E-MAIL: HAWS@HAWS.CO.COM  
 WEBSITE: WWW.HAWS.CO.COM

EQ. NO.:	3377/3377G	MODEL(S):	23377/23377A
DATE:	05/97	DATE:	05/97
APPROVED:		APPROVED:	
RTM:		RTM:	
INFO FAX DOC #:	23377/23377A	INSTALLATION/FAXBACK:	
SIZE:	A	REVISION:	1 OF 1
DATE:	05/97	DATE:	05/97
EQ. NO.:	3377/3377G	MODEL(S):	23377/23377A
DATE:	05/97	DATE:	05/97
APPROVED:		APPROVED:	
RTM:		RTM:	
INFO FAX DOC #:	23377/23377A	INSTALLATION/FAXBACK:	
SIZE:	A	REVISION:	1 OF 1
EQ. NO.:	3377/364.D	MODEL(S):	13066A00
DATE:	05/97	DATE:	05/97
APPROVED:		APPROVED:	
RTM:		RTM:	
INFO FAX DOC #:	13066A00	INSTALLATION/FAXBACK:	
SIZE:	A	REVISION:	1 OF 1