## REPLACEMENT INSTRUCTIONS:

- 1. REQUIRED TOOLS: PHILLIPS SCREWDRIVER
- REMOVE THE COOLER SKIRT (THE LOWER COOLER SKIRT FOR HIGH/LOW MODELS) AND SHUT OFF THE WATER STOP VALVE.

NOTE: SEE WATER COOLER O&M FOR FURTHER DETAILS.

- CAUTION: UNIT IS STILL POWERED ON AT THIS POINT. DISPENSE WATER BRIEFLY TO RELIEVE WATER PRESSURE. UNPLUG THE POWER CORD.
- 4. THE Y-STRAINER IS LOCATED ON THE LEFT SIDE OF THE COOLER JUST BEHIND THE SKIRT (SEE DIAGRAM BELOW). REMOVE THE SINGLE SCREW HOLDING THE Y-STRAINER BRACKET TO THE WATER COOLER FRAME AND PULL THE Y-STRAINER OUT SO IT IS ACCESSIBLE.
- 5. DISCONNECT THE INLET AND OUTLET TUBING (SEE DIAGRAM TO RIGHT) FROM THE Y-STRAINER.
- 6. CONNECT THE TUBING TO THE NEW Y-STRAINER, MAKING NOTE OF THE FLOW DIRECTION ARROW.
- 7. PLACE THE Y-STRAINER INTO ITS BRACKET AND RE-ATTACH IT TO THE WATER COOLER FRAME.
- 8. OPEN THE WATER STOP VALVE AND CHECK FOR LEAKS. PLUG THE UNIT IN AND REPLACE THE SKIRT.



