 


ELECTRICAL WIRING DIAGRAM



NOTES: (CONTINUED FROM SHEET 1)

- 6 LIGHT REPLACEMENT INSTRUCTIONS:
 - 1) REMOVE GUARD/GLOBE ASSEMBLY:
 FIRST LOOSEN SET SCREW (LOCATED ON GUARD WHERE SHOWN). NEXT, ROTATE ASSEMBLY COUNTER CLOCKWISE UNTIL GUARD IS FREE FROM PENDANT MOUNT AND LAMP IS EXPOSED.
 - 2) ONLY REPLACE LAMP WITH HAWS P/N 0003225505.

 WARNING EXPLOSION HAZARD SUBSTITUTION OF

 COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS 1,

 DIVISION 1.
 - 3) REPLACE GUARD/GLOBE ASSEMBLY:
 ROTATE ASSEMBLY CLOCKWISE ONTO THE PENDANT MOUNT
 UNTIL TIGHT AND TIGHTEN SET SCREW.

