MOUNTING FRAME INSTALLATION:

- 1. HOLD ROUGH-IN DIMENSIONS ± 1/8" (3.2mm)
- WHEN INSTALLING THIS UNIT, LOCAL, STATE OR FEDERAL CODES SHOULD BE ADHERD TO. FOR DIFFERENT INSTALLATION HEIGHTS OTHER THAN SHOWN, DIMENSIONS MARKED (*) MUST BE ADJUSTED ACCORDINGLY.
- 3 ALIGN HOLES IN CHILLER SUPPORT TRAY WITH HOLES IN FRAME AND FASTEN IN PLACE WITH #10 SHEET-METAL SCREWS SUPPLIED WITH LINIT
- 4. REFER TO MODEL 1107.8 INSTALLATION DRAWING FOR COMPLETED FOUNTAIN AND PLUMBING ROUGH-IN DIMENSIONS.
- INSERT 5/16"-18 PANEL NUT RETAINERS (SUPPLIED WITH FOUNTAIN) FROM OPPOSITE SIDE OF OPENINGS.
- 6 FOUNTAIN REMOVAL: FIRST REMOVE SCREWS AND THEN SQUEEZE CLIPS ON NUT RETAINER (SUPPLIED WITH FOUNTAIN) TO POP OUT. INSTALL IS REVERSE OF REMOVAL.
- 7 ROUGH-IN DIMENSIONS FOR FOUNTAIN HEIGHTS:

CHILD WHEELCHAIR HEIGHT:

FRAME ROUGH-IN HEIGHT: 3-1/8" (79mm) ELECTRICAL ACCESS: 6-5/8" (168mm)

ADULT WHEELCHAIR HEIGHT:


FRAME ROUGH-IN HEIGHT: 6-1/8" (156mm) ELECTRICAL ACCESS: 9-5/8" (245mm)

ADULT STANDING HEIGHT:


FRAME ROUGH-IN HEIGHT: 11-5/8" (295mm)

ELECTRICAL ACCESS: 15-1/8" (384mm)

IMPORTANT: MOUNTING FRAME MUST BE INSTALLED SO THAT LIP OF FRAME BUTTS AGAINST FINISHED WALL FACE

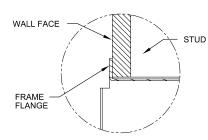

DETAIL A

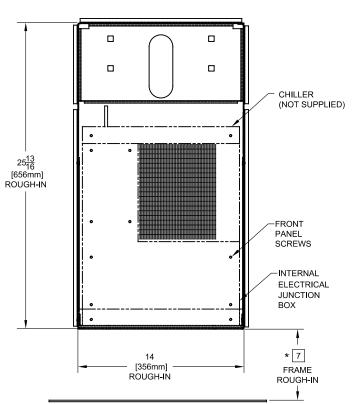

CHILLER ELECTRICAL INSTALLATION:

- ENSURE ELECTRICAL POWER IS OFF AND POWER MATCHES VOLTAGE, PHASE AND CYCLE LISTED ON CHILLER LABEL
- 2. REMOVE FRONT PANEL TO GAIN ACCESS TO INTERNAL JUNCTION BOX.
- HARDWIRE CHILLER THROUGH ITS SIDE. WIRE IN ACCORDANCE WITH LOCAL, STATE OR FEDERAL ELECTRICAL CODES.
- REPLACE FRONT PANEL. <u>DO NOT APPLY POWER UNTIL UNIT WATER SUPPLY IS CONNECTED AND ON.</u>

