

# – DRIP FREE –

IT'S AS EASY AS

1


2

3

1

**INSERT**


bottle to fill

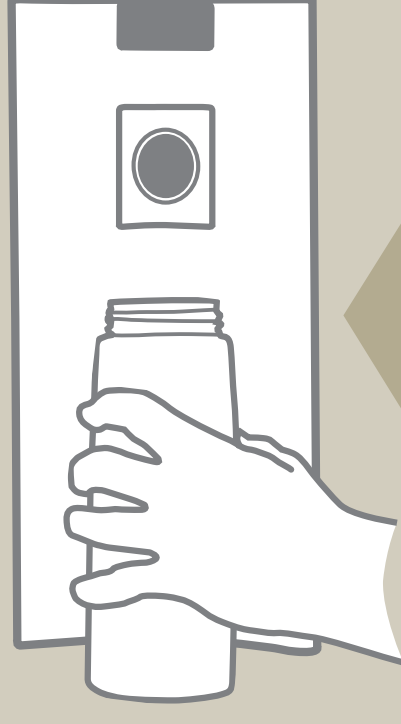

2

**RAISE**

bottle to sensor  
to start water flow

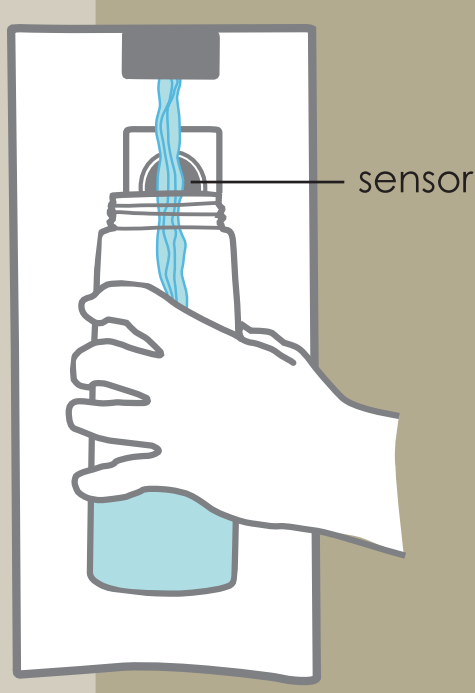

3

**LOWER**

bottle **below sensor**  
water flow will stop  
then remove bottle

