

FEATURES & BENEFITS

OPTIONS


For more information, visit www.hawesco.com or call (888) 640-4297.



SPECIFICATIONS

The Model 9011 ANSI Emergency Shower and Eyewash Testing Kit includes a 5-gallon bucket with lid and marked line indicating the 2 gallon mark, shower sock with a telescoping pole to direct water into bucket, eyewash gauge, tape measure, thermometer, ANSI checklist for testing compliance, and testing instructions. All items included fit directly into the bucket for ease of transportation.

APPLICATIONS

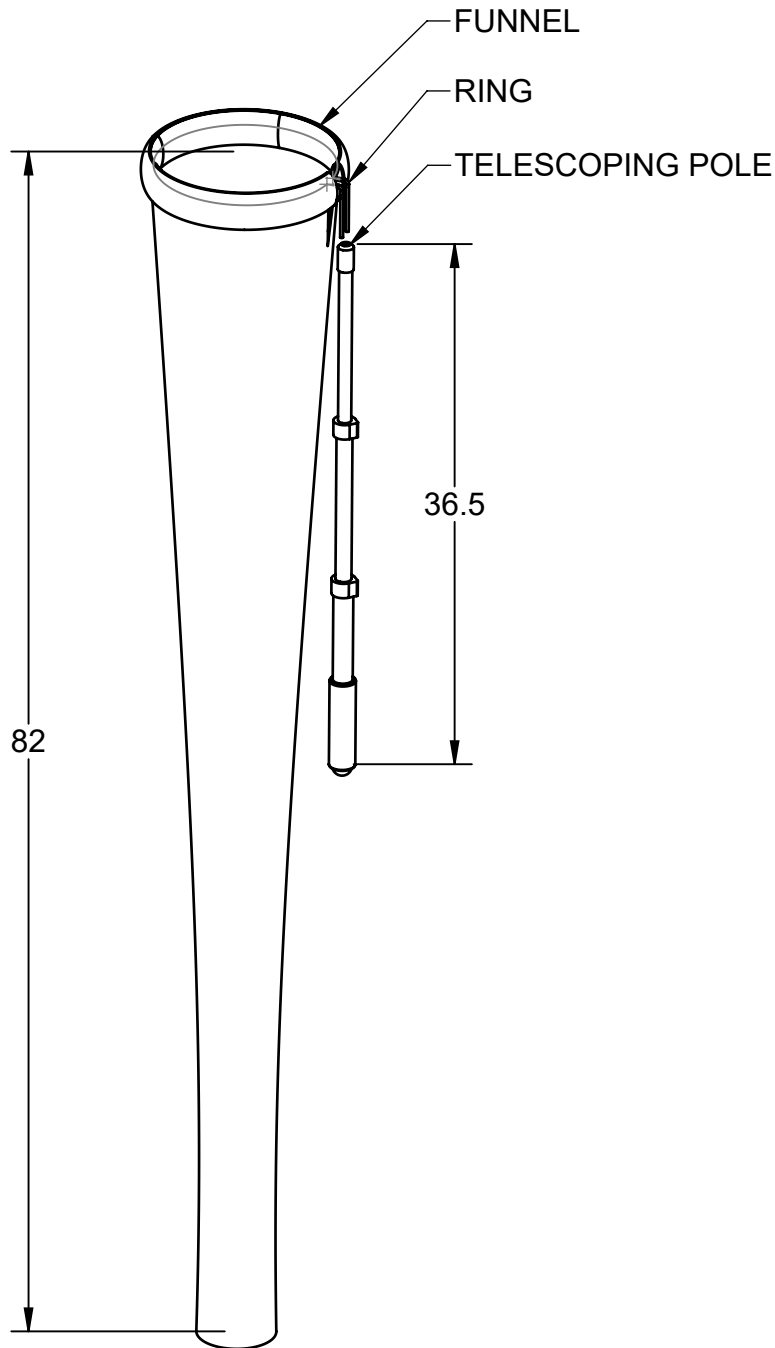

THE MODEL 9010 & 9011 SHOWER TEST KITS GUIDE THE WATER TO A FLOOR DRAIN OR CONTAINMENT BUCKET

GENERAL ASSEMBLY INSTRUCTIONS (9010 & 9011):

1. INSERT THE RING IN THE FUNNEL FOLD
2. INSERT RING HOOKS INTO HOLE OF TELESCOPING POLE

MODEL 9011 ONLY:

1. PLACE THE FUNNEL INTO THE SUPPLIED BUCKET (NOT SHOWN) AND ACTIVATE THE SHOWER FOR 6 SECONDS.
2. IF THE WATER LINE IS BELOW THE 2-GALLON BLACK LINE ON THE BUCKET THEN THE SHOWER FLOW RATE IS NON-COMPLIANT.
3. MEASURE THE TEMPERATURE OF THE WATER USING THE SUPPLIED THERMOMETER (NOT SHOWN). ANSI COMPLIANT RANGE IS 60°F - 100°F (15.5°C - 37.7°C)
4. USE THE SUPPLIED TAPE MEASURE (NOT SHOWN) FOR ALL INSTALLATION AND PERFORMANCE MEASUREMENT REQUIREMENTS IN THE ANSI Z358.1 STANDARD.



1455 KLEPPE LANE
SPARKS, NEVADA 89431
(775) 359-4712 FAX (775) 359-7424
E-MAIL: HAWS@HAWS.CO.COM
WEBSITE: WWW.HAWS.CO.COM

ECN: 6208	REV. ECN: 6208	BY: RH	MODEL(S)	PART NUMBER
DRAWN: RH	DATE: 03/10/25	CHKD: JSLP	9010 & 9011 INSTALL ASSEMBLY	0002080204.D
APPROVED: IR	DATE: 03/13/25	SCALE: 1:12	DRAWING TYPE: INSTALLATION	REVISION 8
			SIZE: A	SHEET 1 OF 1