
# $\mathsf{model}\,VRK02E.C$

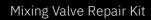



# WUW CON

## SPECIFICATIONS

The Haws VRK02E.C is a valve repair kit for the 9202E mixing valve. This kit includes parts to repair the check stops.

#### APPLICATIONS

#### FEATURES & BENEFITS

#### OPTIONS

For more information, visit <u>www.hawsco.com</u> or call (888) 640-4297.


#### KIT INSTALLATION INSTRUCTIONS

#### VRK02E.A: KIT, REPAIR, 9202E, COMPLETE VRK02E.C: KIT, REPAIR, 9202E, CHECK STOPS (REFER TO SHEET 3) CONSISTS OF VRK02E.B AND VRK02E.C. FOLLOW INSTRUCTIONS OUTLINED FOR EACH AS 1. NOTE: HOT AND COLD CHECK STOP ASSEMBLIES ARE IDENTICAL. NOTED ON THIS PAGE. 2. REMOVE HOT CHECK STOP COVER WITH ADJUSTABLE WRENCH (3/4" FLATS). VRK02E.B: KIT, REPAIR, 9202E, MAIN MIXING CHAMBER (REFER TO SHEET 2) 3. REMOVE SPRING, CHECK STOP ASSEMBLY, CAGE, AND MESH SCREEN FROM VALVE. 1. REMOVE 4 COVER BOLTS AND 4 WASHERS AS SHOWN (NOTE 9/16" HEX). 4. CLEAN ANY VISIBLE DEBRIS FROM CHECK STOP CAVITY. 2. REMOVE COVER. 5. INSTALL NEW MESH SCREEN, CAGE, AND CHECK STOP ASSEMBLY FROM KIT AS SHOWN ON SHEET 3. 3. REMOVE O-RING FROM COVER AND REPLACE WITH NEW O-RING FROM KIT. 6. INSTALL NEW SPRING, ADJUSTMENT SCREW, AND CHECK STOP COVER FROM KIT. 4. REMOVE OVERLOAD ASSEMBLY FROM COVER BY PULLING STRAIGHT OUT, AND REPLACE ADJUSTMENT SCREW SHOULD ALWAYS BE FULLY OUT (CCW) UNLESS THERE IS A NEED TO WITH NEW OVERLOAD ASSEMBLY FROM KIT. SHUT OFF THE HOT OR COLD WATER FOR TESTING. 5. REMOVE PISTON/THERMOSTAT ASSEMBLY FROM VALVE BY PULLING STRAIGHT UP ON 7. REPEAT STEPS 2-6 WITH COLD CHECK STOP ASSEMBLY. PISTON. 6. REMOVE CYLINDER ASSEMBLY FROM VALVE BY PULLING FIRMLY STRAIGHT UP ON THE CYLINDER ASSEMBLY. VRK02E.E: KIT, BASIC MAINT, 9202E, T-STAT+O-RINGS REMOVE THREE PISTON SPRINGS FROM VALVE FUNNEL. 1. REFER TO EXPLODED VIEWS IN SHEETS 2 - 4 AND DISASSEMBLY AND RE-ASSEMBLY INSTRUCTIONS ON THIS PAGE. 8. REMOVE VALVE FUNNEL FROM VALVE BY PULLING STRAIGHT UP ON FUNNEL AND FUNNEL O-RING IF IT DOES NOT COME OUT WITH THE FUNNEL. 2. RECOMMEND ANY DRY O-RINGS BE LUBRICATED WITH FOOD GRADE SILICONE LUBRICANT, SUCH AS DOW CORNING 111 PRIOR TO INSTALLATION. INSTALL NEW FUNNEL O-RING AND FUNNEL FROM KIT. 10. INSTALL NEW CYLINDER ASSEMBLY FROM KIT AS SHOWN ON SHEET 2 BY PRESSING 3. THERMOSTAT RETAINING NUT (18MM HEX) SHOULD BE INSTALLED ONLY SNUGLY, TAKING CARE NOT TO DAMAGE THERMOSTAT OR PISTON. STANDARD RIGHT HAND THREAD. FIRMLY STRAIGHT DOWN AND ROCKING THE ASSEMBLY TO WORK IT PAST THE COLD INLET CHANNEL. VALVE COVER BOLTS SHOULD BE TORQUED TO 25 FT-LBS PER VRK02E.B INSTRUCTIONS. 11. INSTALL 3 NEW PISTON SPRINGS FROM KIT INTO VALVE FUNNEL. 12. INSTALL NEW PISTON ASSEMBLY INTO CYLINDER AS SHOWN ON SHEET 2, BEING CAREFUL TO CLOCK THE PISTON SUCH THAT THE THREE FLATS UNDER THE PISTON SIT ON THE PISTON SPRINGS. THE PISTON SHOULD MOVE FREELY AGAINST THE SPRING PRESSURE IN THE CYLINDER. 13. INSTALL THE EXISTING COVER ON THE VALVE (CLOCKING IS NOT CRITICAL) AND RE-INSTALL THE FOUR WASHERS AND COVER BOLTS. 14. TIGHTEN BOLTS IN A CROSS PATTERN EVENLY UNTIL THE COVER CONTACTS THE VALVE BODY. 15. TORQUE BOLTS TO 25 FT-LBS.

### WARNING! VALVES MUST ALWAYS BE SAFELY REMOVED FROM SERVICE AND DRAINED PRIOR TO MAINTENANCE OR REPAIRS!

G	7			SPARKS (775) 359-471 E-MAIL: HA	WS@HÀ	A 89431 75) 359-7424
ECN NO. REVISED 5429 ECN: 54 DRAWN: DATE DP 08/01 APPROVED: DATE	29 DP : CHK'D.:	MODEL(S)	VRK02E.A/.E VALVE REPA			PART NUMBER 0510000956 REVISION 1
DP	08/06/19	SCALE:	DRAWING TYPE:	INSTALLATION	SIZE: A	SHEET 1 OF 3

©2019 Haws Corporation - All Rights Reserved. HAWS<sup>®</sup> and other trademarks used in these materials are the exclusive property of Haws Corporation.

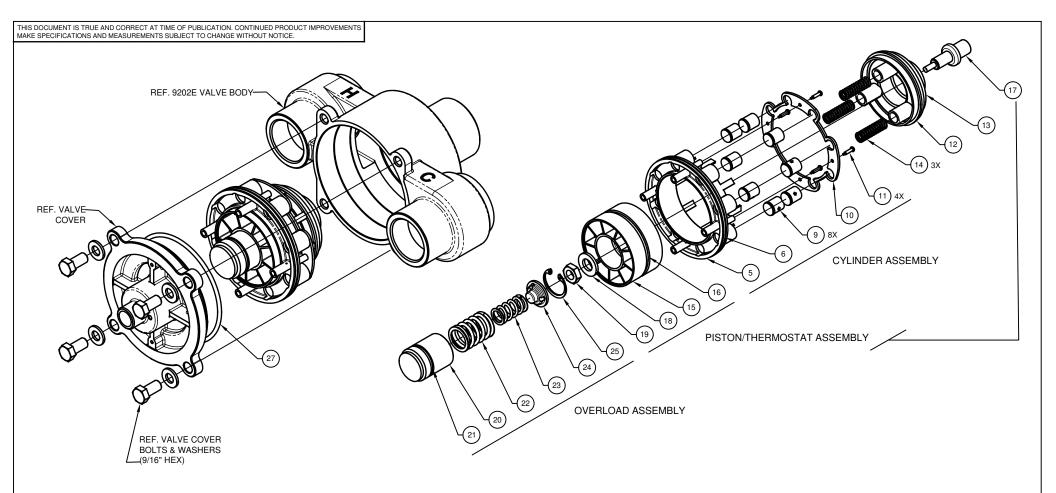


VRK02E.B MAIN MIXING CHAMBER REPAIR KIT								
ITEM #	SUB ASSEMBLY	QTY	DESCRIPTION	VRK02E.E BASIC MAINT. KIT				
27	N/A	1	O-RING DASH# 242 (3.984 ID X .139 W)	INCLUDED				
21	OVERLOAD ASSEMBLY	1	O-RING DASH# 123 (1.174 ID X .103 W)	INCLUDED				
20	OVERLOAD ASSEMBLY	1	OVERLOAD HOUSING					
22	OVERLOAD ASSEMBLY		OVERLOAD COMPRESSION SPRING 1.095 OD					
23	OVERLOAD ASSEMBLY	1	OVERLOAD COMPRESSION SPRING 0.720 OD					
24	OVERLOAD ASSEMBLY	1	OVERLOAD INSERT					
25	OVERLOAD ASSEMBLY	1	RETAINING RING					
19	PISTON/THERMOSTAT ASSY	1	THERMOSTAT RETAINING NUT SST M12X1.75					
18	PISTON/THERMOSTAT ASSY	1	FLAT WASHER SST 12MM					
15	PISTON/THERMOSTAT ASSY	1	PLUNGER					
16	PISTON/THERMOSTAT ASSY	1	O-RING DASH# 231 (2.609 ID X .139 W)	INCLUDED				
17	PISTON/THERMOSTAT ASSY	1	THERMOSTAT MAIN 60-100	INCLUDED				
5	CYLINDER ASSEMBLY	1	SLEEVE					
6	CYLINDER ASSEMBLY	1	O-RING DASH# 231 (3.987 ID X .103 W)	INCLUDED				
9	CYLINDER ASSEMBLY	8	CHECK VALVE 14MM					
10	CYLINDER ASSEMBLY	1	CHECK VALVE RETAINER					
11	CYLINDER ASSEMBLY	4	SCREW #4 SST					
14	N/A	3	PISTON SPRING SST					
12	N/A	1	FUNNEL, VALVE					
13	N/A	1	O-RING DASH# 335 (2.725 ID X .210 W)	INCLUDED				

#### VRK02E.B MAIN MIXING CHAMBER REPAIR KIT SHOWN ON THIS SHEET



©2019 Haws Corporation - All Rights Reserved. HAWS<sup>®</sup> and other trademarks used in these materials are the exclusive property of Haws Corporation.

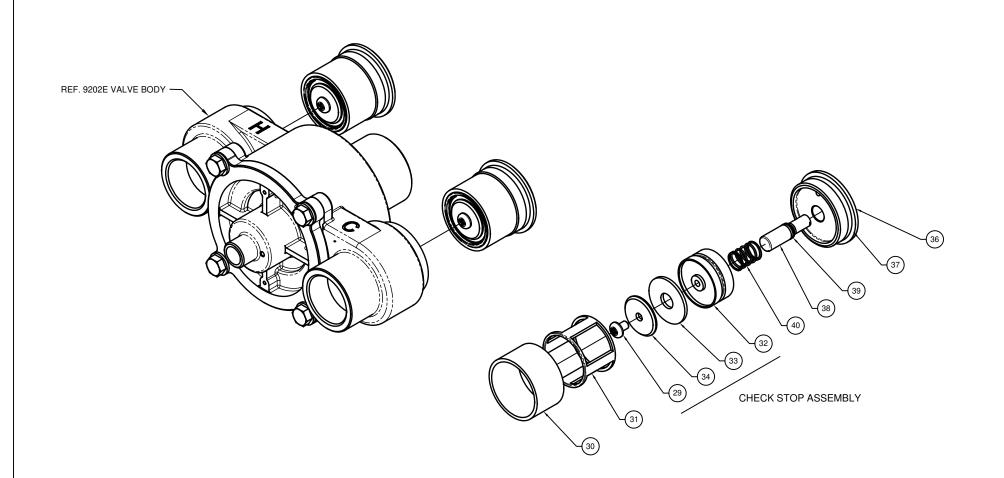

#### NOTE: HOT AND COLD CHECK STOPS ARE IDENTICAL. KIT INCLUDES BOTH.

VRK02E.C CHECK STOPS REPAIR KIT								
ITEM # SUB ASSEMBLY		QTY	DESCRIPTION	VRKEWE.E BASIC MAINT. KIT				
36	N/A	2	CHECK STOP COVER BONNET					
37	N/A	2	O-RING DASH# 225 (1.859 ID X .139 W)	INCLUDED				
39	N/A	2	O-RING DASH# 012 (.364 ID X .070 W)	INCLUDED				
38	N/A	2	STEM CHECK STOP ADJUST. SCREW					
40	N/A	2	SPRING					
32	CHECK STOP ASSY	2	POPPET (NO O-RING)					
33	CHECK STOP ASSY	2	WASHER EPDM					
34	CHECK STOP ASSY	2	WASHER CHECK STOP					
29	CHECK STOP ASSY	2	SCREW SST 1/4-20					
31	N/A	2	CAGE SLEEVE					
30	N/A	2	MESH SCREEN SST					

#### VRK02E.C CHECK STOPS REPAIR KIT SHOWN ON THIS SHEET



©2019 Haws Corporation - All Rights Reserved. HAWS<sup>®</sup> and other trademarks used in these materials are the exclusive property of Haws Corporation.