
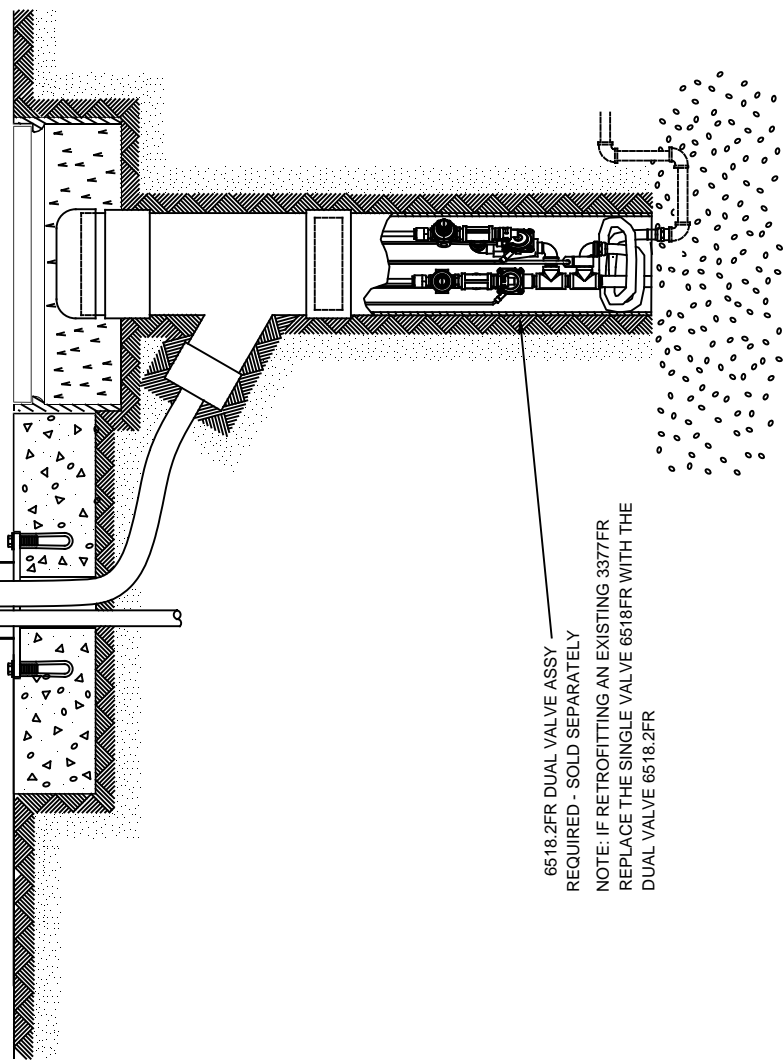
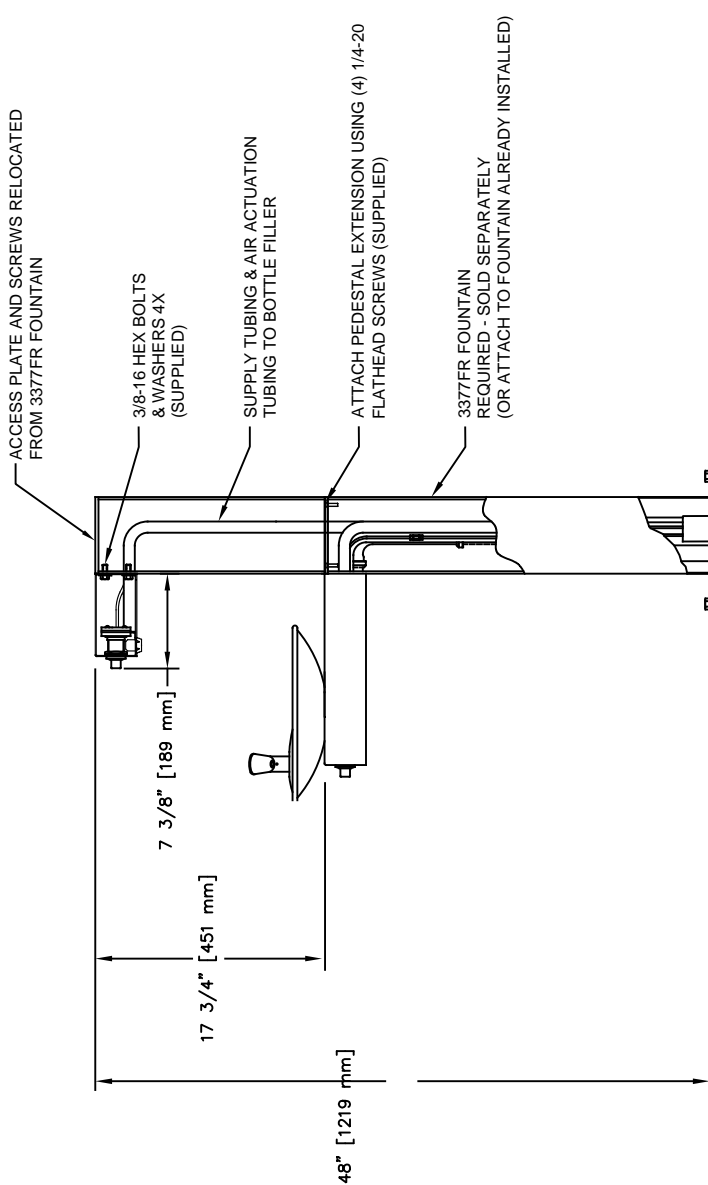


**INSTALLATION INSTRUCTIONS:**

- 1) INSTALL 6518.2FR BURY VALVE AND 3377FR FOUNTAIN ACCORDING TO THEIR INSTALLATION INSTRUCTIONS.
- 2) REMOVE THE ACCESS PLATE FROM THE EXISTING 3377FR PEDESTAL. FEED THE INSULATED SUPPLY TUBING AND AIR LINE THROUGH THE HOLE IN THE BOTTOM PLATE OF THE PEDESTAL EXTENSION.
- 3) BOLT THE PEDESTAL EXTENSION ONTO THE 3377FR FOUNTAIN USING THE (4) 1/4-20 FLATHEAD BOLTS PROVIDED. A BALL-END HEX WRENCH IS RECOMMENDED FOR BOLT INSTALLATION.
- 4) INSTALL THE BOTTLE FILLER BRACKET ONTO THE PEDESTAL USING THE (4) 3/8-16 HEX BOLTS PROVIDED. CONNECT THE WATER SUPPLY LINE TUBE TO THE DISPENSING NOZZLE. CONNECT THE AIR LINE TO THE PUSH BUTTON VALVE.
- 5) RE-INSTALL THE ACCESS PLATE ON TOP OF THE PEDESTAL EXTENSION.

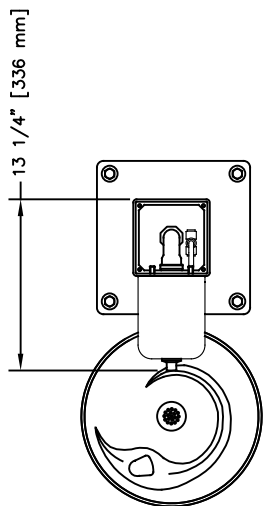

6518.2FR DUAL VALVE ASSY  
 REQUIRED - SOLD SEPARATELY  
 NOTE: IF RETROFITTING AN EXISTING 3377FR  
 REPLACE THE SINGLE VALVE 6518FR WITH THE  
 DUAL VALVE 6518.2FR

		1455 KLEPPE LANE SPARKS, NEVADA 89431 (775) 359-4712 FAX (775) 359-7424 E-MAIL: HAWS@HAWS.CO.COM WEBSITE: WWW.HAWS.CO.COM	
		MODEL(S) 3377BFFR	PART NUMBER 0510000510.D REVISION 3
ECN NO. 5081 DRAWN: MJ APPROVED: FV	REVISED PER: ECN: 5527 DATE: 06/08/16	BY: FV CHKD: DP DATE: 04/02/20	SCALE: 1:16 DRAWING TYPE: INSTALLATION SIZE: A SHEET 1 OF 1