SHOWER


(REF)

NOTES:

1 SNAP CLAMP TO BE INSTALLED FIRST FOR VERTICAL SUPPORT.

2 SCREWS INSTALLED FROM FRONT, WITH BOX DOOR OFF.

3 NUTS TO BE INSTALLED TO A TORQUE OF 12 IN-LBS MAX.

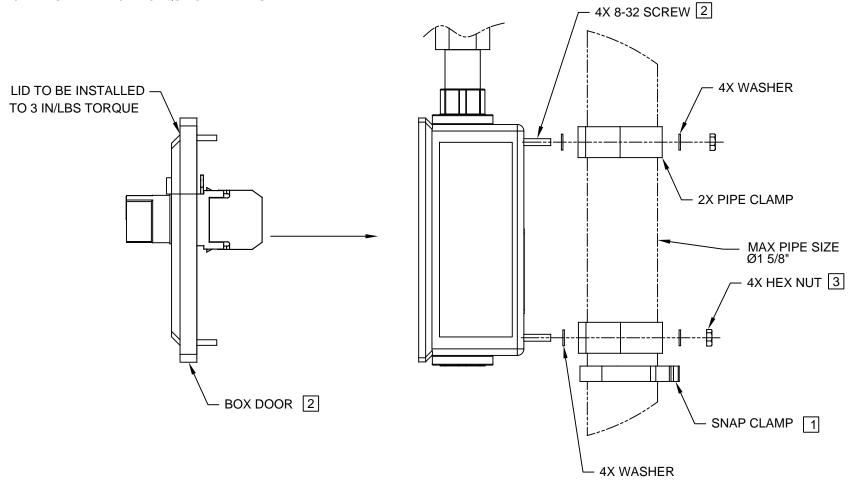

CLAMP ASSEMBLY DETAIL

