

#### NOTES:

- WHEN INSTALLING THIS UNIT, LOCAL, STATE, OR FEDERAL CODES SHOULD BE ADHERED TO. INSTALL A TRAP IN THE WASTE LINE AND A SCREWDRIVER STOP IN THE SUPPLY LINE IF REQUIRED.
- ARM HEIGHT CAN BE CONFIGURED AS DESIRED, REFER TO SHEET 7 FOR ALTERNATE CONFIGURATIONS.

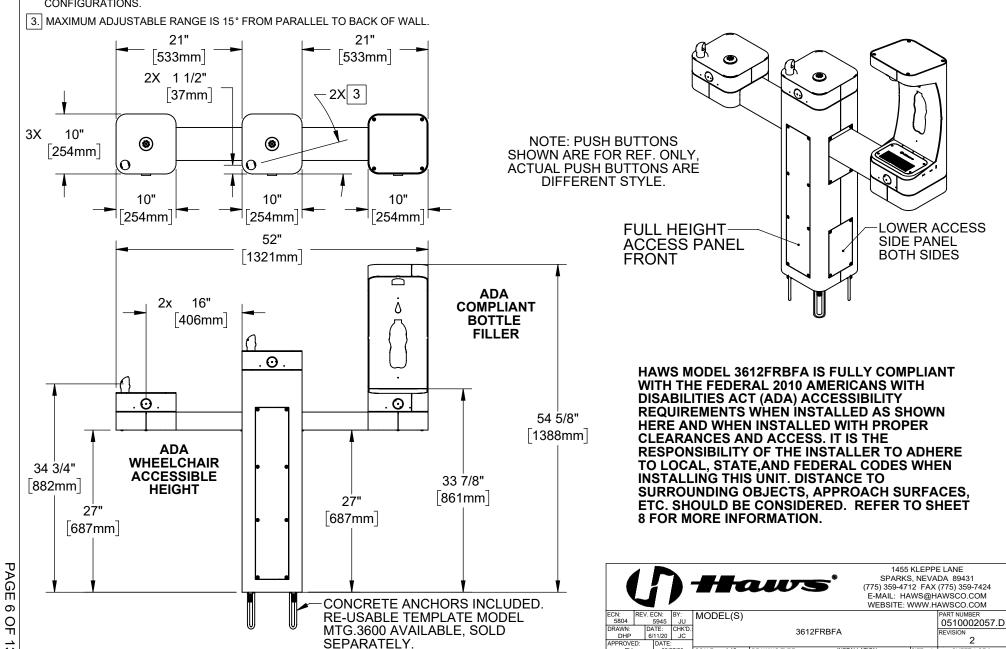

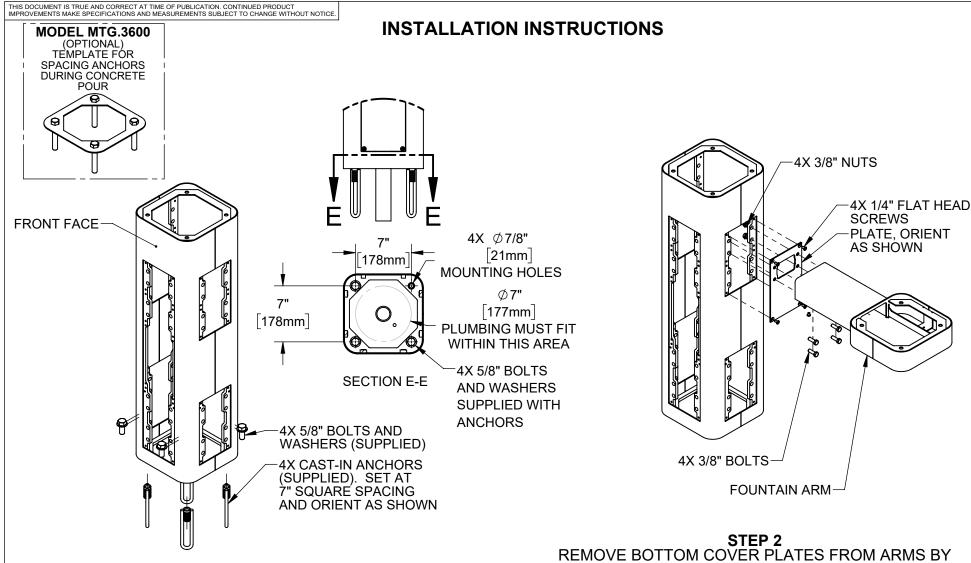


STEP 1

MOUNT PEDESTAL TO CONCRETE SLAB IN DESIRED ORIENTATION. SLAB TO BE 30" MINIMUM SQUARE AND 6" MINIMUM THICK (BY OTHERS). PLUMBING CAST IN CONCRETE MUST FIT IN 7" DIAMETER AREA CENTERED UNDER PEDESTAL LOCATION. FOR 3612FRBFA MODEL, SEE REQUIRED BURY VALVE (NOT SUPPLIED) INSTALLATION REQUIREMENTS ON SHEET 6.

REMOVE BOTTOM COVER PLATES FROM ARMS BY REMOVING 3 1/4" BUTTON HEAD SCREWS.
INSTALL ONE ARM ON RIGHT SIDE AS SHOWN. USE 1/4" FLAT HEAD SCREWS (SUPPLIED) TO INSTALL PLATE. USE 3/8" BOLTS AND NUTS (SUPPLIED) AND TORQUE TO 18 FT-LBS TO INSTALL ARM.



## INSTALLATION INSTRUCTIONS

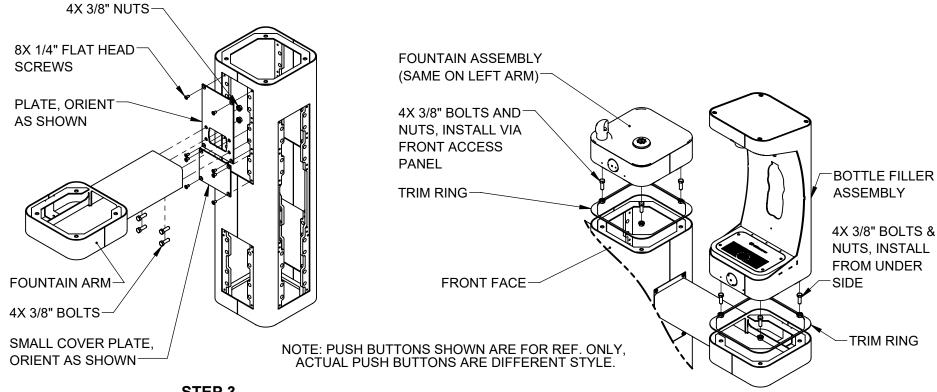


STEP 3
INSTALL REMAINING ARM ON LEFT SIDE AS SHOWN.
USE 1/4" FLAT HEAD SCREWS (SUPPLIED) TO INSTALL
PLATES. USE 3/8" BOLTS AND NUTS (SUPPLIED) AND
TORQUE TO 18 FT-LBS TO INSTALL ARM.

PLACE SQUARE TRIM RING ON BOTTOM OF BOTTLE FILLER AND PLACE BOTTLE FILLER ON TOP OF EITHER ARM, FACING THE FRONT. USE 3/8" BOLTS AND NUTS TO SECURE BOTTLE FILLER TO THE ARM. PLACE TRIM RING AND INSTALL FOUNTAIN ON PEDESTAL VIA THE FRONT ACCESS PANEL. PLACE TRIM RING AND INSTALL SECOND FOUNTAIN ON REMAINING ARM. CAREFULLY CENTER BOTTLE FILLER, FOUNTAINS, AND TRIM RINGS, THEN TORQUE BOLTS/NUTS TO 18 FT-LBS



### INSTALLATION INSTRUCTIONS

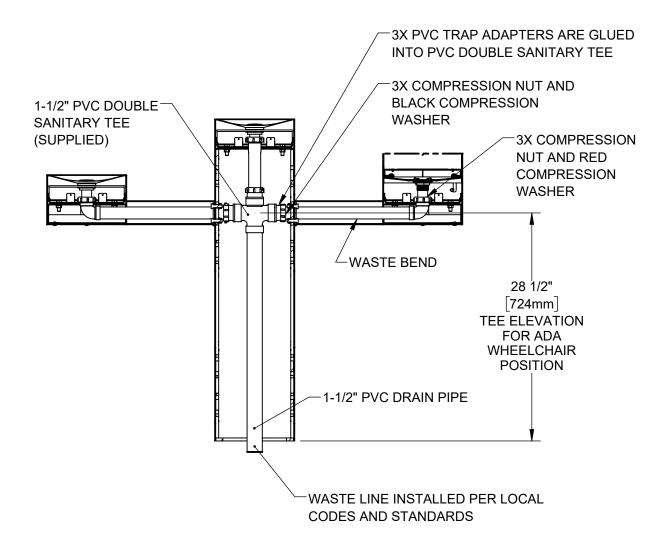

# STEP 5

INSTALL SUPPLIED DRAIN COMPONENTS AS SHOWN. RED COMPRESSION WASHERS ADAPT FROM 1-1/4" TO 1-1/2" AT EACH DRAIN TAIL PIECE. BLACK COMPRESSION WASHERS ARE USED IN TRAP ADAPTERS AT TEE(S). USE APPROPRIATE PVC CEMENT TO MAKE SOLVENT CEMENT CONNECTIONS. TRIM WASTE BEND AND/OR TAIL PIECE LENGTH IF REQUIRED. NOTE THAT EXTRA PARTS MAY BE INCLUDED TO FACILITATE OTHER CONFIGURATIONS OF THIS FOUNTAIN.

(1) Haw	5
---------	---

1455 KLEPPE LANE SPARKS, NEVADA 89431 (775) 359-4712 FAX (775) 359-7424 E-MAIL: HAWS@HAWSCO.COM

2

| REV. ECN: | BY: | MODEL(S) | 3612FRBFA | 0510002057.D


 DRAWN:
 DATE:
 CHKD:

 DHP
 6/11/20
 JC

 APPROVED:
 DATE:
 FV

 FV
 09/27/23
 SCALE:
 1:12
 DRAWING TYPE:
 INSTALLATION
 SIZE:
 A
 SH

## **INSTALLATION INSTRUCTIONS**

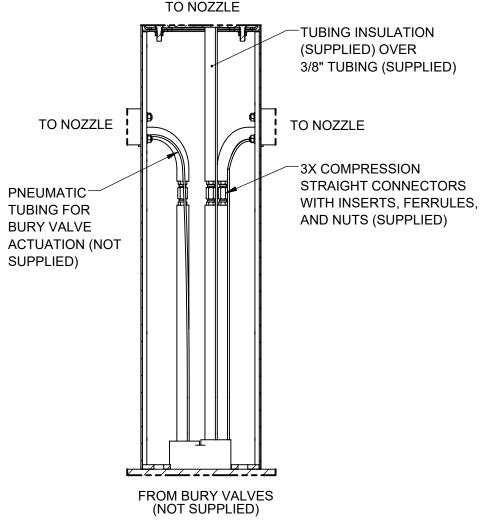

**3612FRBFA SUPPLY PLUMBING\*** 

\* SEE NEXT SHEET OF THIS DRAWING FOR MORE INFORMATION ON INSTALLING BURY VALVES WITH THIS MODEL.

### STEP 6

COMPLETE WATER SUPPLY PLUMBING AS SHOWN. OPEN SUPPLY VALVE(S) AND TEST. REPLACE ARM BOTTOM PLATES AND PEDESTAL ACCESS PLATES. BURY VALVES (NOT SUPPLIED) ARE REQUIRED FOR 3612FRBFA INSTALLATION. REFER TO BURY VALVE OPERATION AND MAINTENANCE MANUAL FOR ADDITIONAL INFORMATION.



1455 KLEPPE LANE SPARKS, NEVADA 89431 (775) 359-4712 FAX (775) 359-7424 E-MAIL: HAWS@HAWSCO.COM

E-MAIL: HAWS@HAWSCO.COM

WEBSITE: WWW.HAWSCO.COM

#REV.ECN: BY: MODEL(S)

#ART NUMBER

0510002057.D

**VALVE LAYOUT** (FOR REFERENCE ONLY)

3612FRBFA

PART NUMBER 0510002057.D 2

© 2023 Haws Corporation - All Rights Reserved. HAWS® and other trademarks used in these materials are the exclusive property of Haws Corporation.


PAGE

12

유

#### NOTES ON OPTIONAL CONFIGURATIONS

HAWS 3600FR SERIES OUTDOOR FOUNTAINS ARE MODULAR AND CAN BE ASSEMBLED AND CONFIGURED MANY DIFFERENT WAYS. DISPLAYED HERE ARE A FEW EXAMPLES. CONFIGURATIONS OTHER THAN THAT SHOWN IN THE INSTALLATION INSTRUCTIONS FOR THE 3612FRBFA MAY AFFECT COMPLIANCE WITH ADA REGULATIONS. IT IS THE RESPONSIBILITY OF THE INSTALLER TO UNDERSTAND LOCAL, STATE, AND FEDERAL REGULATIONS AS APPLICABLE IF INSTALLING THIS FOUNTAIN IN CONFIGURATIONS OTHER THAN THAT INDICATED ON SHEET 1 (PAGE 6 OF 13).

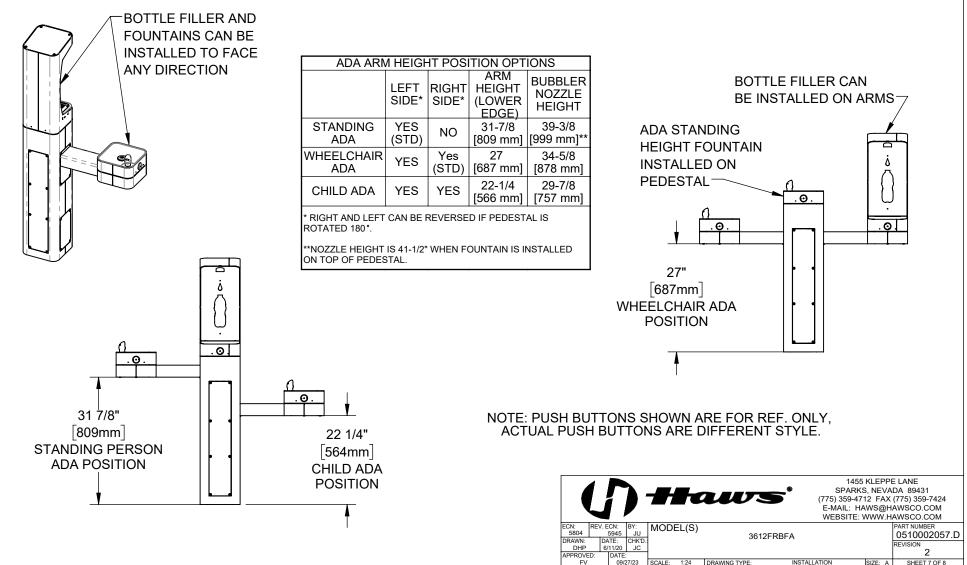



PAGE

3

유

- 4. CLEAR FLOOR SPACES APPLY FOR ALL MODELS WITH A DRINKING FOUNTAIN OR BOTTLE FILLER INSTALLED AT ADA WHEELCHAIR ACCESSIBLE HEIGHT AND PEDESTAL MOUNTED BOTTLE FILLERS.
- 5. ORIENTATION OF CLEAR FLOOR SPACE IS DEPENDENT ON THE FOUNTAIN OR BOTTLE FILLER ORIENTATION.
- 6. SOME CALIFORNIA JURISDICTIONS MAY REQUIRE 18" MIN.
- 7. SOME CALIFORNIA JURISDICTIONS MAY REQUIRE 32" MIN.
- 8. REFER TO ADA STANDARDS AND/OR YOUR LOCAL BUILDING CODE FOR CLEAR SPACE GUIDELINES FOR PARALLEL APPROACH.

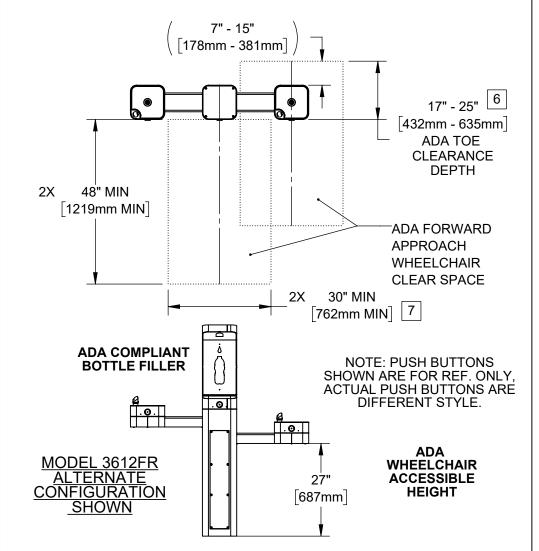

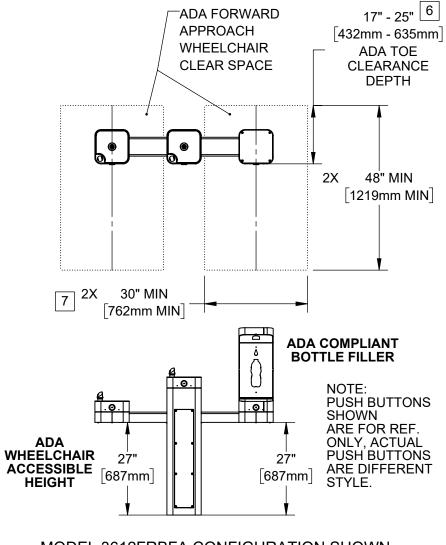

OF

13

PAGE

## MODEL 3612FRBFA CONFIGURATION SHOWN

THESE HAWS MODELS ARE FULLY COMPLIANT WITH THE FEDERAL 2010 AMERICANS WITH DISABILITIES ACT (ADA) ACCESSIBILITY REQUIREMENTS WHEN INSTALLED AS SHOWN HERE AND WHEN INSTALLED WITH PROPER CLEARANCES AND ACCESS. IT IS THE RESPONSIBILITY OF THE INSTALLER TO ADHERE TO LOCAL STATE, AND FEDERAL CODES WHEN INSTALLING THIS UNIT. DISTANCE TO SURROUNDING OBJECTS, APPROACH SURFACES, ETC. SHOULD BE CONSIDERED.

