

## FEATURES & BENEFITS

---

## OPTIONS

---

For more information, visit [www.hawscos.com](http://www.hawscos.com) or call (888) 640-4297.



## SPECIFICATIONS

---

Model SP65LP AXION® MSR low-pressure eye/face wash head shall include inverted directional flow with laminar flow and an integral 3 gpm (11 L) flow control, along with a yellow plastic pop-off dust cover.

## APPLICATIONS



---

For use with Haws Integrated products including models 8710 enclosed shower and eyewash, and 8740 overhead tank shower.

INSTALLATION / RETRO FIT STEPS

**NOTE: FOR USE ON OTS UNITS ONLY, SUCH AS 8720, 8740 & 8770.**

1. WHEN REPLACING EXISTING EYEWASH ASSEMBLY WITH SP65LP FOLLOW STEPS 2 - 5.  
WHEN INSTALLING SP65LP ONTO NEW UNIT FOLLOW STEPS 3 THROUGH 5 (IF APPLICABLE).
- 2 REMOVE EXISTING EYEWASH BY ROTATING EYEWASH TEE COUNTER-CLOCKWISE.  
DO NOT REMOVE BRASS NIPPLE FROM BOWL HOLDER.
- 3 FASTEN SP65LP ONTO FITTING (NOT SUPPLIED). ORIENT TAB TOWARD REAR OF UNIT  
(AWAY FROM USER). DO NOT OVER TIGHTEN.
- 4 PLACE DUST COVER ONTO EYE/FACE WASH.
- 5 EXISTING COMPONENTS SHOWN (TYPICAL MODEL) ARE FOR REFERENCE ONLY AND  
MAY NOT REPRESENT SPECIFIC ASSEMBLY BEING INSTALLED/SERVED.

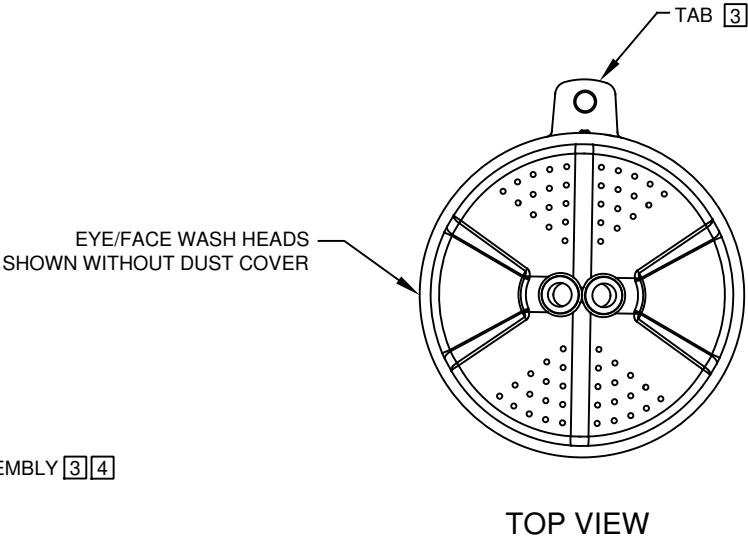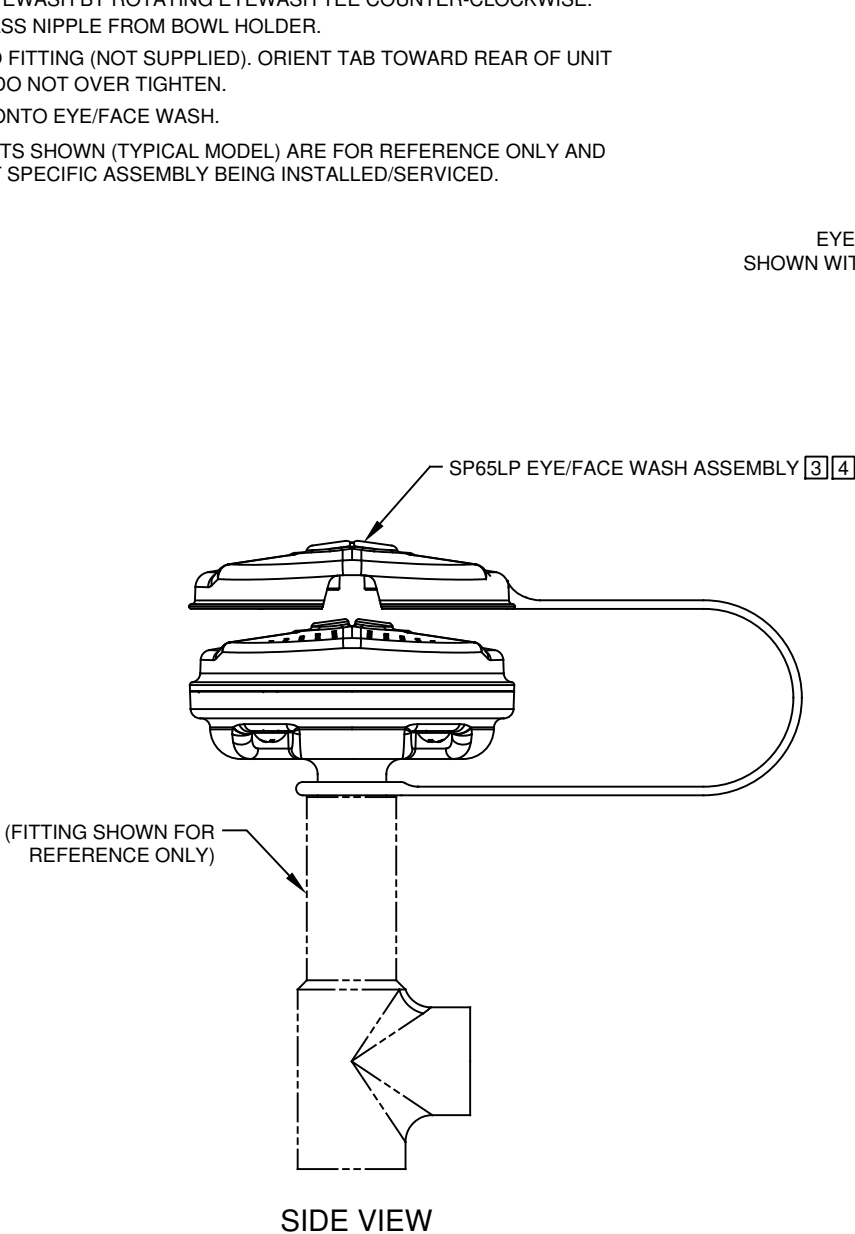




1455 KLEPPE LANE  
SPARKS, NEVADA 89431  
(775) 359-4712 FAX (775) 359-7424  
E-MAIL: HAWS@HAWSO.COM  
WEBSITE: WWW.HAWSO.COM

ECN NO. 4109			REVISED PER BY: ECN: 5228 VWC			MODEL(S)			PART NUMBER		
DRAWN: VWC			DATE: 10/27/17			CHK'D: VWC			0110000661		
APPROVED: FV			DATE: 11/08/17			SCALE: NA			REVISION		
						DRAWING TYPE: INSTALLATION			1		
						SIZE: A			SHEET 1 OF 2		

SP65LP  
AXION EYE/FACE WASH

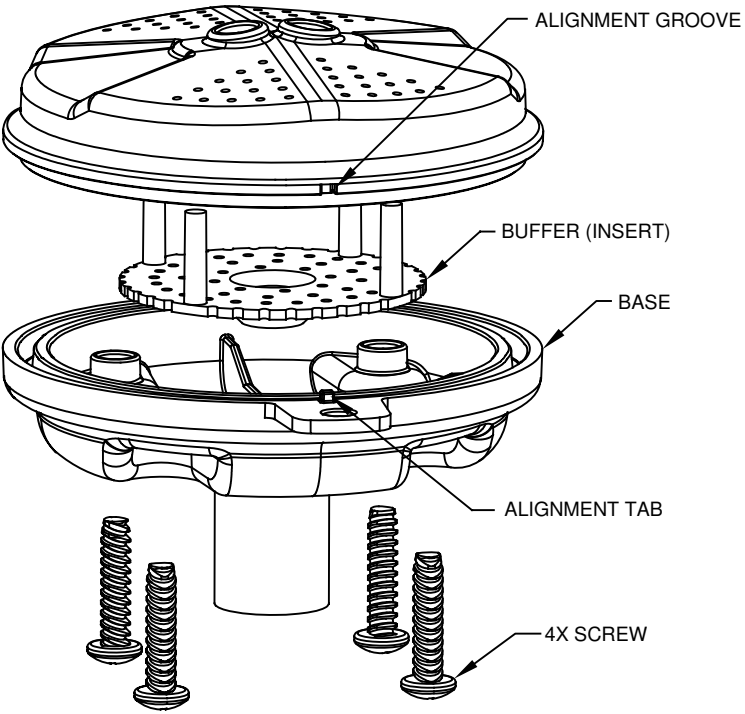

EYE/FACE WASH HEAD HAS TWO  
LARGE OPENINGS (FOR EYES)  
AND MULTIPLE SMALLER  
OPENINGS (FOR FACE WASH)

TOP HEAD

EYE/FACE WASH  
SHOWN WITHOUT  
DUST COVER

NOTE ORIENTATION OF POSTS IN  
RELATIONSHIP TO ALIGNMENT  
GROOVE. POSTS MUST BE INSIDE OF  
RIBS (AS SHOWN).

BOTTOM HEAD

RIB

BUFFER  
(INSERT)

ALIGNMENT GROOVE



1455 KLEPPE LANE  
SPARKS, NEVADA 89431  
(775) 359-4712 FAX (775) 359-7424  
E-MAIL: HAWS@HAWS.CO.COM  
WEBSITE: WWW.HAWS.CO.COM

ECN NO. 4109	REVISED PER ECN: 5228	BY: VWC	MODEL(S)	PART NUMBER
DRAWN: VWC	DATE: 10/27/17	CHKD: VWC	SP65LP	0110000661
APPROVED: FV	DATE: 11/08/17		AXION EYE/FACE WASH	REVISION 1
SCALE: NA	DRAWING TYPE: INSTALLATION	SIZE: A	SHEET 2 OF 2	