



1455 Kleppe Lane ◆Sparks, NV 89431-6467 ◆(775) 359-4712 ◆Fax (775) 359-7424 E-mail: <u>haws@hawsco.com</u> ◆ website: <u>www.hawsco.com</u>

No. 0580002177 (3)

Model 8605SS Single Entry Stainless Steel Emergency Shower Booth & Eye/Face Wash Booth

NOTE TO INSTALLER: Please leave this information with the Maintenance Department.

LIMITED WARRANTY

HAWS warrants that all of its products are guaranteed against defective material or poor workmanship for a period of one year from the date of shipment. The foregoing notwithstanding, HAWS warrants certain specific products or components thereof for an adjusted period. A list of these excepted products and components and a description of their respective warranty terms may be found here: www.hawsco.com/warranty. HAWS' liability under this warranty shall be discharged by furnishing without charge F.O.B. HAWS factory any goods, or part thereof, which shall appear to the Company upon inspection to be of defective material or not of first-class workmanship, provided that a claim is made in writing to Company within a reasonable period after receipt of the product. Where claims for defects are made, the defective part or parts shall be delivered to the Company, prepaid, for inspection. HAWS shall not be liable for the cost of repairs, alterations or replacements, or the labor required to implement them, or for any expense connected therewith made by the owner or owner's agents, except upon written authority from HAWS. HAWS shall not be liable for any damages caused by defective materials or poor workmanship, except for replacements, as provided above. Buyer agrees that HAWS has made no other warranties either express or implied in addition to those above stated, except that of title with respect to any of the products or equipment sold hereunder and that HAWS shall not be liable for general, special, incidental, or consequential damages claimed to arise under the contract of sale.

Equipment manufactured by HAWS is warranted to function if installation and maintenance instructions provided are adhered to. The units also must be used for the purpose for which they were intended. Any HAWS emergency equipment is intended to supplement first-aid treatment. Due to widely varying conditions, HAWS cannot guarantee that the use of this emergency equipment will prevent serious injury or the aggravation of existing or prior injuries.

EXCEPT AS EXPRESSLY STATED HEREIN, HAWS HEREBY DISCLAIMS ALL WARRANTIES, WHETHER EXPRESS OR IMPLIED, ARISING BY LAW OR OTHERWISE, INCLUDING WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY MAY NOT BE MODIFIED OR EXTENDED WITHOUT THE WRITTEN CONSENT OF HAWS. REMEDIES AND REPLACEMENTS STATED HEREIN ARE EXCLUSIVE. IN NO EVENT SHALL HAWS BE LIABLE FOR ANY SPECIAL, PUNITIVE, CONSEQUENTIAL OR INCIDENTAL DAMAGES TO ANY PERSON INCLUDING BUT NOT LIMITED TO DAMAGES FOR LOSS OF USE OR PROFITS, SUBSTITUTE PRODUCTS OR COSTS, PROPERTY DAMAGE, OR OTHER MONETARY LOSS.

SHOULD YOU EXPERIENCE DIFFICULTY WITH THE INSTALLATION OF THIS MODEL PLEASE CALL:

TECHNICAL SUPPORT:	1-800-766-5612
FOR CUSTOMER SERVICE:	1-888-640-4297

LOCATION OF UNIT: The Model 8605SS Emergency Shower & Eye/Face Wash Booth should be installed in close proximity to potential accident areas. It should be clearly identified free from obstructions and easy to access.


SUPPLY LINE: The minimum recommended line size is 1" IPS with 30-90 psi (2-6 ATM) flowing pressure. Where sediment or mineral content is a problem, an inlet filter is recommended.


PLUMBING CONNECTIONS: Inlet supply is female 1" NPT. Waste outlet is 4" NPT (F).

	TROUBLESHOOTING							
PROBLEM			REPAIR CHECKLIST					
1.	No flow.	1.	Check the main shut-off valve.					
2.	Insufficient water flow.	2.	Verify minimum 30psi (2 ATM) flowing supply line pressure.					
3.	Insufficient water flow on eyewash, however, shower is sufficient.	3.	Probable clogging of flow control due to inadequate line flushing. Unscrew eye/face wash head and remove the four screws to disassemble the head. Clean flow control and reassemble head. See Installation Drawing (page 5) for details.					
4.	Insufficient water flow at the showerhead, however, eyewash is sufficient.	4.	Probable clogging of flow control inside showerhead. Unscrew showerhead off of elbow and clean rubber flow control.					
5.	Eyewash stream does not meet desired eye level.	5.	Possible blocked flow control, see above solution. Possible non-leveled eyewash assembly.					
6.	Water does not drain properly.	6.	Check the main waste line of your building to see if it does handle the capacity required for the entire drainage system.					

For more information on Haws products, see our website: www.hawsco.com


THIS DOCUMENT IS TRUE AND CORRECT AT TIME OF PUBLICATION. CONTINUED PRODUCT IMPROVEMENTS MAKE SPECIFICATIONS AND MEASUREMENTS SUBJECT TO CHANGE WITHOUT NOTICE.	ITEM	DESCRIPTION	PART NO.
	1	EYE/FACE WASH HEAD W/ 4.2 GPM FLOW CONTROL	0110001578
	2	VALVE REPAIR KIT	VRK 7650
	3	PULL ROD	SP202
	4	SHOWER/EYEWASH SIGN	SP178
	5	TEST TAG	SP170
	6	SHOWER HEAD	SP829SS
	7	SHOWER VALVE ASSEMBLY	0006581890
	8	SHOWER CURTAIN	0510002178
	9	EYE/FACE WASH DUST COVER	9091

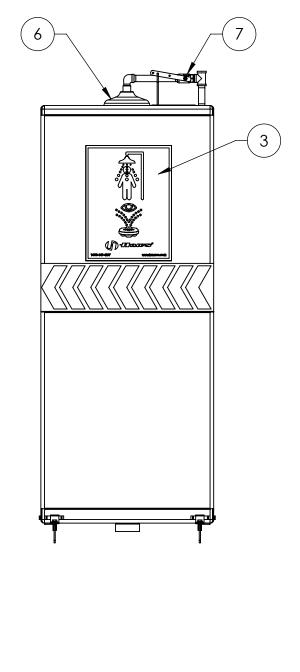

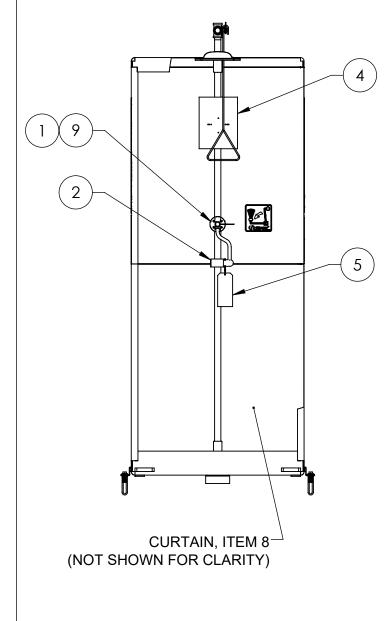


© 2025 Haws Corporation - All Rights Reserved.

HAWS® and other trademarks used in these materials are the exclusive property of Haws Corporation.

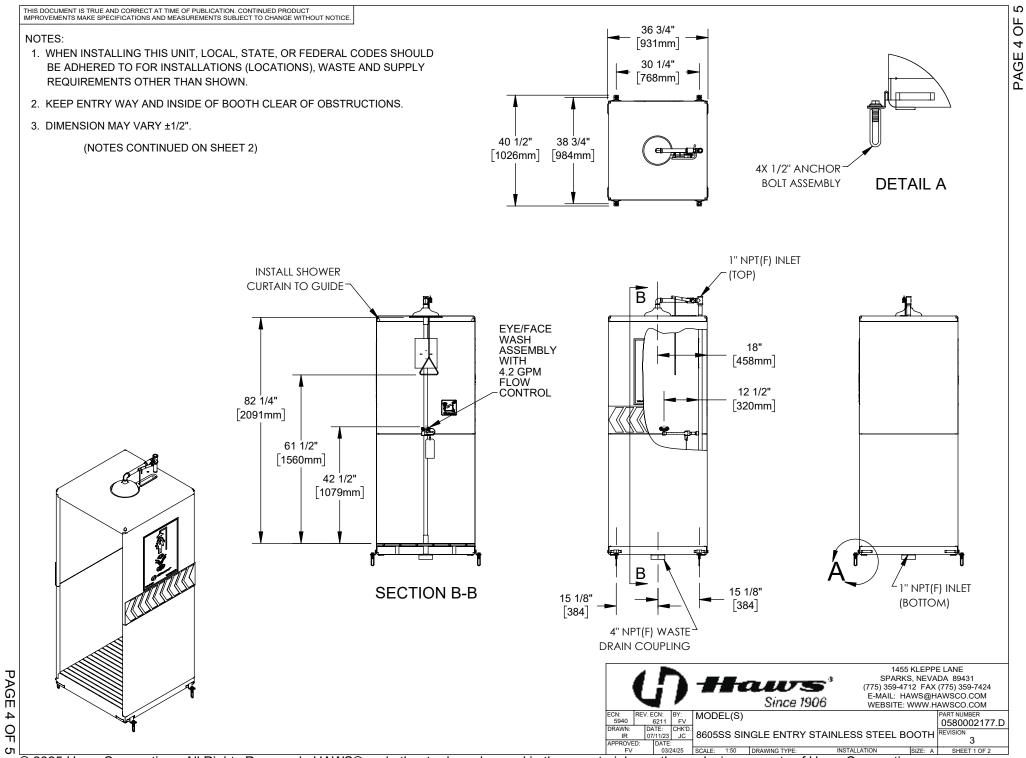

© 2025 Haws Corporation - All Rights Reserved. HAWS® and other trademarks used in these materials are the exclusive property of Haws Corporation.

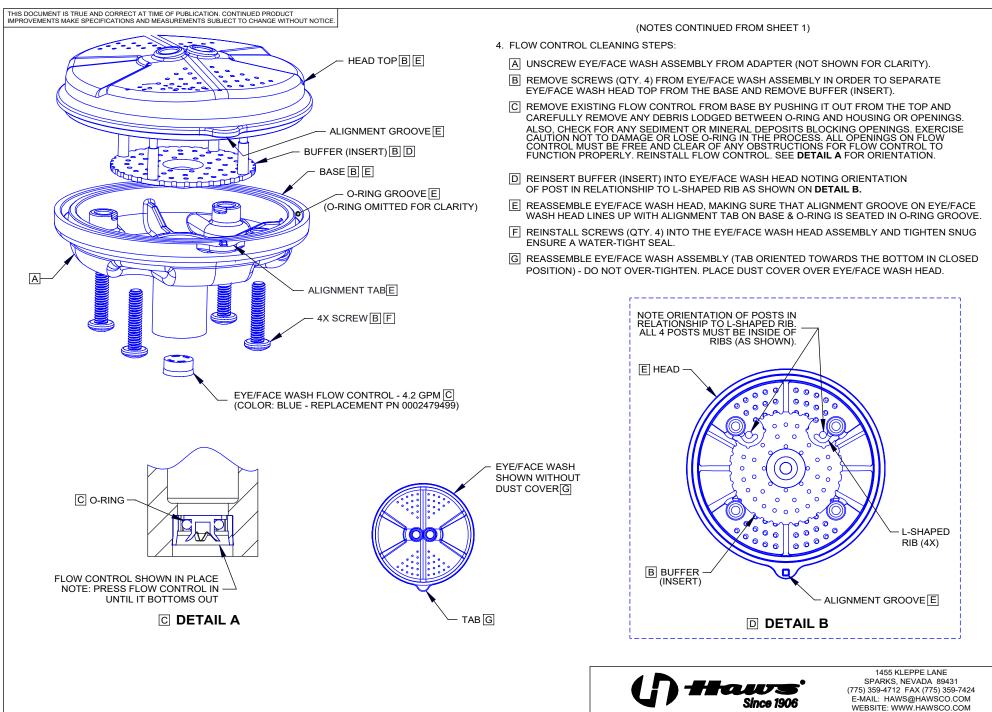

S

ЧО

S PAGE

PART NUMBER

REVISION

SIZE

0580002177.D

3

SHEET 2 OF 2

© 2025 Haws Corporation - All Rights Reserved. HAWS® and other trademarks used in these materials are the exclusive property of Haws Corporation.

REV. ECN:

6211

DATE

03/24/25

DATE: 07/11/23 CHK'D

FV.

JC

FCN:

5940

IR

APPROVED:

FV

DRAWN

MODEL(S)

8605SS SINGLE ENTRY STAINLESS STEEL BOOTH