

# LAB PRODUCTS



**NEW model 7661**  
Hand Wash Sink with AXION® Eye/face Wash

This brochure represents some of the HAWES® lab products, and features the AXION® MSR technology. For more comprehensive list of products, visit [www.hawesco.com](http://www.hawesco.com).

# LAB PRODUCTS

## LAB PULL DOWN FEATURES & BENEFITS

- *AXION MSR* eye/face wash head
- *AXION* stainless steel showerhead with hydrodynamic design for equal distribution of water throughout flow
- Valve is designed to make flushing of fluid occur with the pull of a lever

The pull-down units offer a variety of options in both surface-mount and fully-recessed models.

- Pull-down design for wheelchair accessibility
- Eye/face wash and valve assembly is prebuilt and fully water/pressure tested
- 18-Gauge Type 304 stainless steel cabinet



### Model 7655WCSM

Wheelchair accessible surface-mount *AXION MSR* eye/face wash. Chrome-plated brass pull-down valve for eye/face wash and easy access in-line strainer. Perfect for mounting on block or solid walls which cannot be cut into.

Fully-recessed model 7655WCC available.



### Model 7656WCC

Barrier-free, fully-recessed, wall-mounted unit features the *AXION MSR* eye/face wash. Chrome-plated brass pull-down valve for eye/face wash and easy access in-line strainer. Stainless steel drain pan to collect wash waste within cabinet.

Surface-mounted model 7656WCSM available.



### Model 8355WCW

Barrier-free, fully-recessed combination unit features the *AXION* stainless steel showerhead with the *AXION MSR* eye/face wash. Fully-recessed design with pull-down lever to activate shower. Chrome-plated brass pull-down valve for eye/face wash and easy access in-line strainer.

Ceiling-mounted shower model 8355WCC available.



### Model 8356WCC

Barrier-free, wall-mounted, fully recessed combination shower unit features the *AXION* stainless steel showerhead with the *AXION MSR* eye/face wash. Design of the shower allows for flush in the ceiling mounting, or unit to hang down from the ceiling. Stainless steel drain pan to collect wash waste within cabinet.

Wall-mounted shower model 8356WCW available.





### Model 8356WCSM

Wheelchair accessible surface-mount combination unit features AXION stainless steel showerhead and AXION MSR eye/face wash with a pull-down lever to activate shower. Perfect for mounting on block or solid walls which cannot be cut into. Easy access exterior mounted in-line strainer.



### Model 8356WCDD

Barrier-free combination unit features the AXION stainless steel showerhead with the AXION MSR eye/face wash. Fully recessed wall-mount design with pull-down lever to activate shower. Stainless steel drain pan and daylight drain feature that allows for installation where in-wall drainage is not available.

### Model 8163

Concealed ceiling supply drench shower with AXION MSR polished stainless steel showerhead and extra long pull rod.



### Model 7360BT-7460BT

Wall-mounted eye/face wash with AXION MSR eye/face wash. Zero Vertical Velocity™ stream engineering with even laminar flow. Round 11" (27.9 cm) stainless steel receptor and aluminum wall bracket. Includes a mesh in-line strainer and ball valve with stainless steel ball and stem.



### Model 9201E

AXION thermostatic mixing valve that mixes hot and cold water to supply tempered water to emergency shower and eyewash fixtures requiring flow up to 31 GPM (117 LPM). CSA Certified to ASSE 1071 and applicable sections of CSA B125.3.



### Model 9201EW

AXION thermostatic mixing valve that mixes hot and cold water to supply tempered water to emergency eyewash fixtures requiring flow up to 10 GPM (37.9 LPM). CSA Certified to ASSE 1071 and applicable sections of CSA B125.3.



new

### Model 7660

## HAND WASH SINK WITH AXION® EYE/FACE WASH

Wall-mounted, barrier-free, motion-activated, 24" wide stainless-steel hand wash sink with motion-activated faucet and AXION MSR pulldown eye/face wash which features an inverted directional laminar flow and achieves Zero Vertical Velocity™, supplied by an integral 3.7 gpm flow control and yellow pop-off dust cover.

30" wide hand wash sink model 7661 available.



### Model 7610

Barrier-free pull-down eye/face wash with AXION MSR head. Easy activation fold-down design. Extended length pull-down arm to accommodate wheelchair access. Activation and deactivation occur at a 30-degree angle limiting water splash. Counter or wall rear-mount design allows the sink to remain open to other uses. Model 7610S with shorter 13" arm available.




### Model 8905

Wall-mounted eye/face wash with AXION MSR eye/face wash and body spray head. Unit is activated with simple squeeze lever operation. 12-foot (3.66 m) yellow recoil hose provides an extended coverage area to further optimize the irrigation process.



### Model 7611

Lab unit is installed in accessible sink locations. AXION MSR eye/face wash head is easily activated by the emergency equipment's swing-out design. Side-mount design allows the unit to be mounted from either side of the sink.

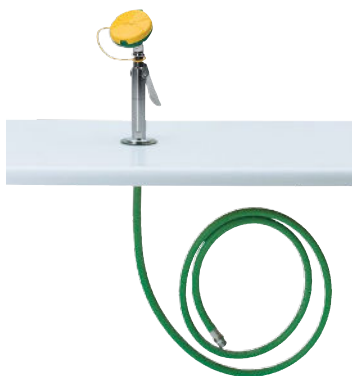

### Model 8904

Counter-mounted AXION eye/face wash and body spray head. Activated with simple squeeze lever operation. 8-foot (244 cm) green hose for extended coverage area to further optimize the irrigation.



### Model 7612LH

Sink or counter-mounted AXION MSR stainless steel eye/face wash head. Swing-away, left-hand operation allows the area to stay clear for everyday use. Dust cover for protection from debris when not in use. Unit is also available for right-hand operation.

# AXION<sup>®</sup> MSR:

## Your Best Practice for Emergency Response



AXION<sup>®</sup> ground-breaking designs continue to change the emergency response landscape by offering the only medically superior response solution in the industry. *AXION MSR* products provide a complete ANSI/ISEA Z358.1 compliant safety solution coupled with enhanced victim comfort and injury reduction.

### **ANSI/ISEA Z358.1**

REQUIRES THAT A CONTROLLED FLOW OF FLUSHING FLUID IS PROVIDED AT A VELOCITY LOW ENOUGH TO BE NON-INJURIOUS TO THE USER.

### **AXION EYE/FACE WASH**

#### **INJURY REDUCTION**

Inverted wash streams clear the eye by gently sweeping contaminants away from the eye interior and nasal cavity helping reduce further injury.

#### **INCREASED VICTIM COMFORT**

Laminar flow eye/face wash streams provide even, consistent, predictable stream height for greater user comfort, encouraging use for the full 15-minute ANSI/ISEA Z358.1 requirement.

#### **MEDICALLY SUPERIOR**

*AXION MSR* is the only eye/face wash duplicating the “inside-out” flushing methodology recommended and used by medical professionals.





**US/Canada**

Haws HQ • [www.hawesco.com](http://www.hawesco.com) • +1888.640.4297

**Latin America**

Haws LATAM • [www.hawesco.com.br](http://www.hawesco.com.br) • +55.11.4813.9977

**Asia Pacific**

Haws APAC • [www.haws.sg](http://www.haws.sg) • +65.6367.0359

**Europe/Middle East/Africa**

Haws EMEA • [www.haws.ch](http://www.haws.ch) • +41 (0) 34.420.6000



1455 KLEPPE LANE • SPARKS, NV 89431

[www.hawesco.com](http://www.hawesco.com) • 1.888.640.4297 • +1.775.359.4712 • fax: 1.775.359.7424 • email: [info@hawesco.com](mailto:info@hawesco.com)

©2024 Haws • All Rights Reserved • REV 0324